



SWADLING

BRASSWARE



INSTALLATION INSTRUCTIONS

Absolute Tub Mounted Handshower

6360000

Handles Suffix

RD0 White Sleeve

RD4 Grey Sleeve

RD2 Metal Sleeve


RD9 Black Sleeve

IMPORTANT INSTALLATION INFORMATION



- Before Installation, please check all parts against the parts list on the back page of this booklet.
- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Swadling Brassware for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.

Swadling Brassware, Churchward Road, Yate, Bristol, BS37 5PL
Telephone: 01454 322888 **Email:** techsupport@swadlingbrassware.co.uk



DIMENSIONS

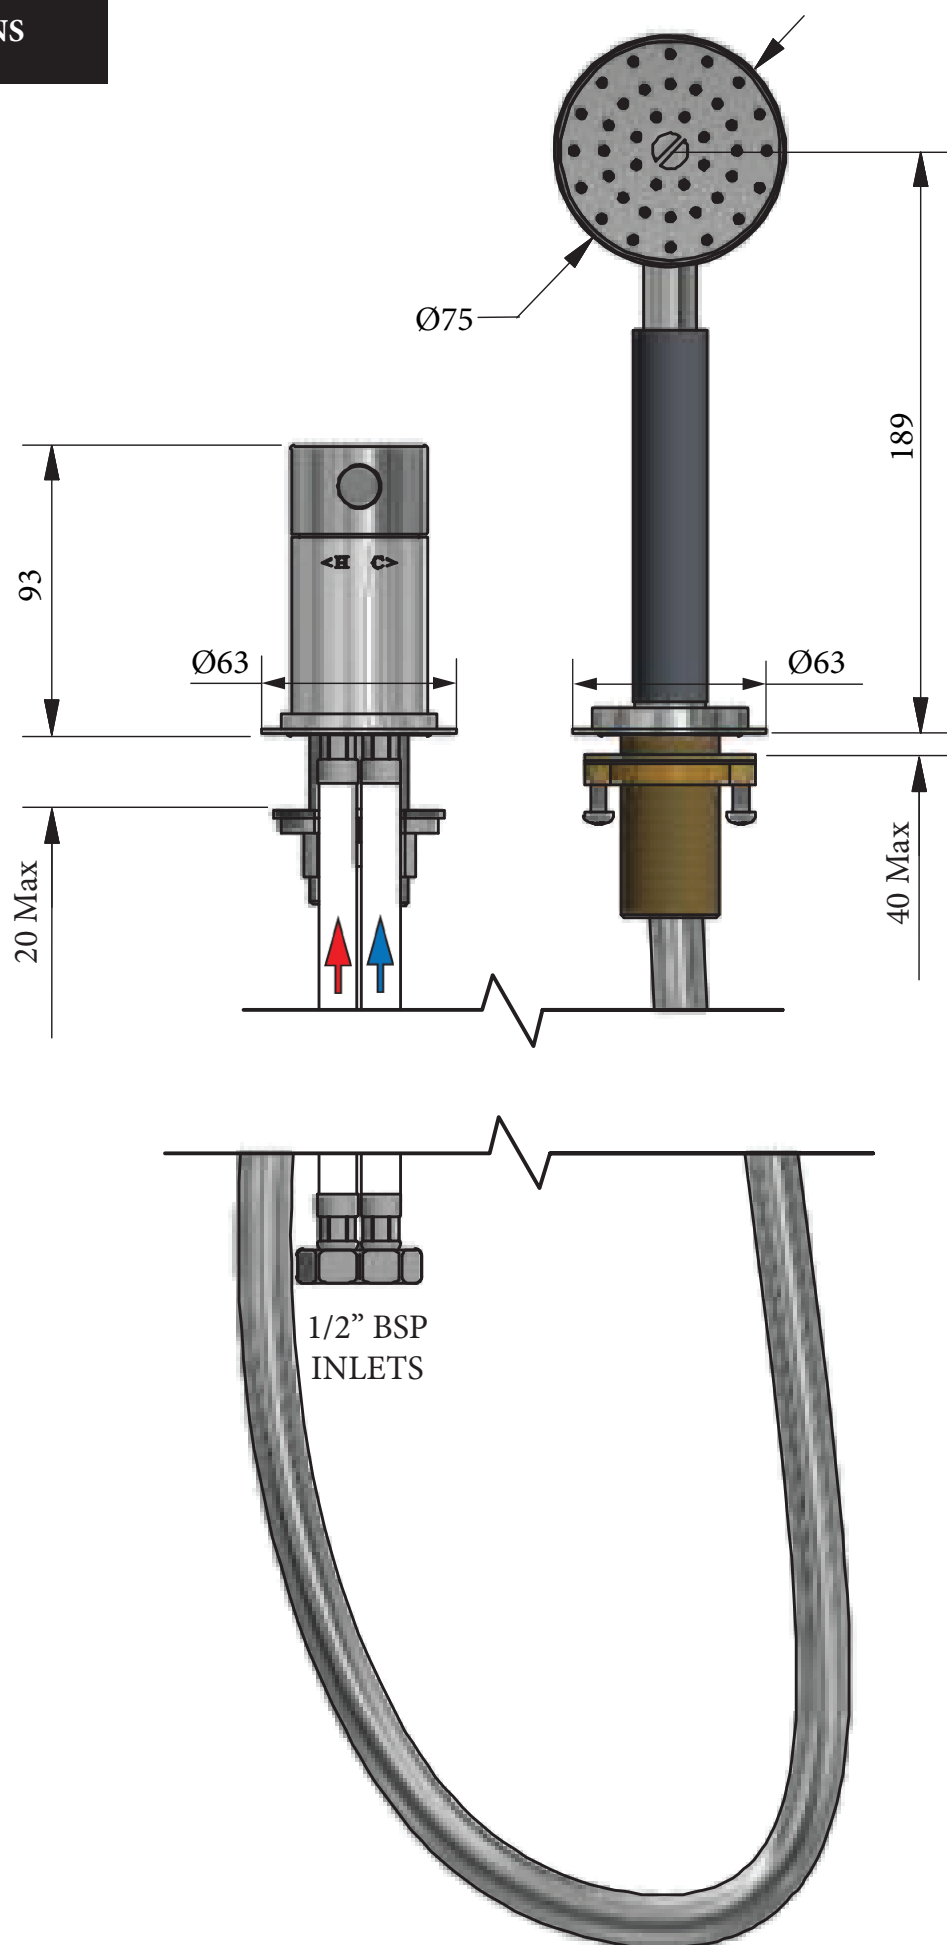


INSTALLATION 1.

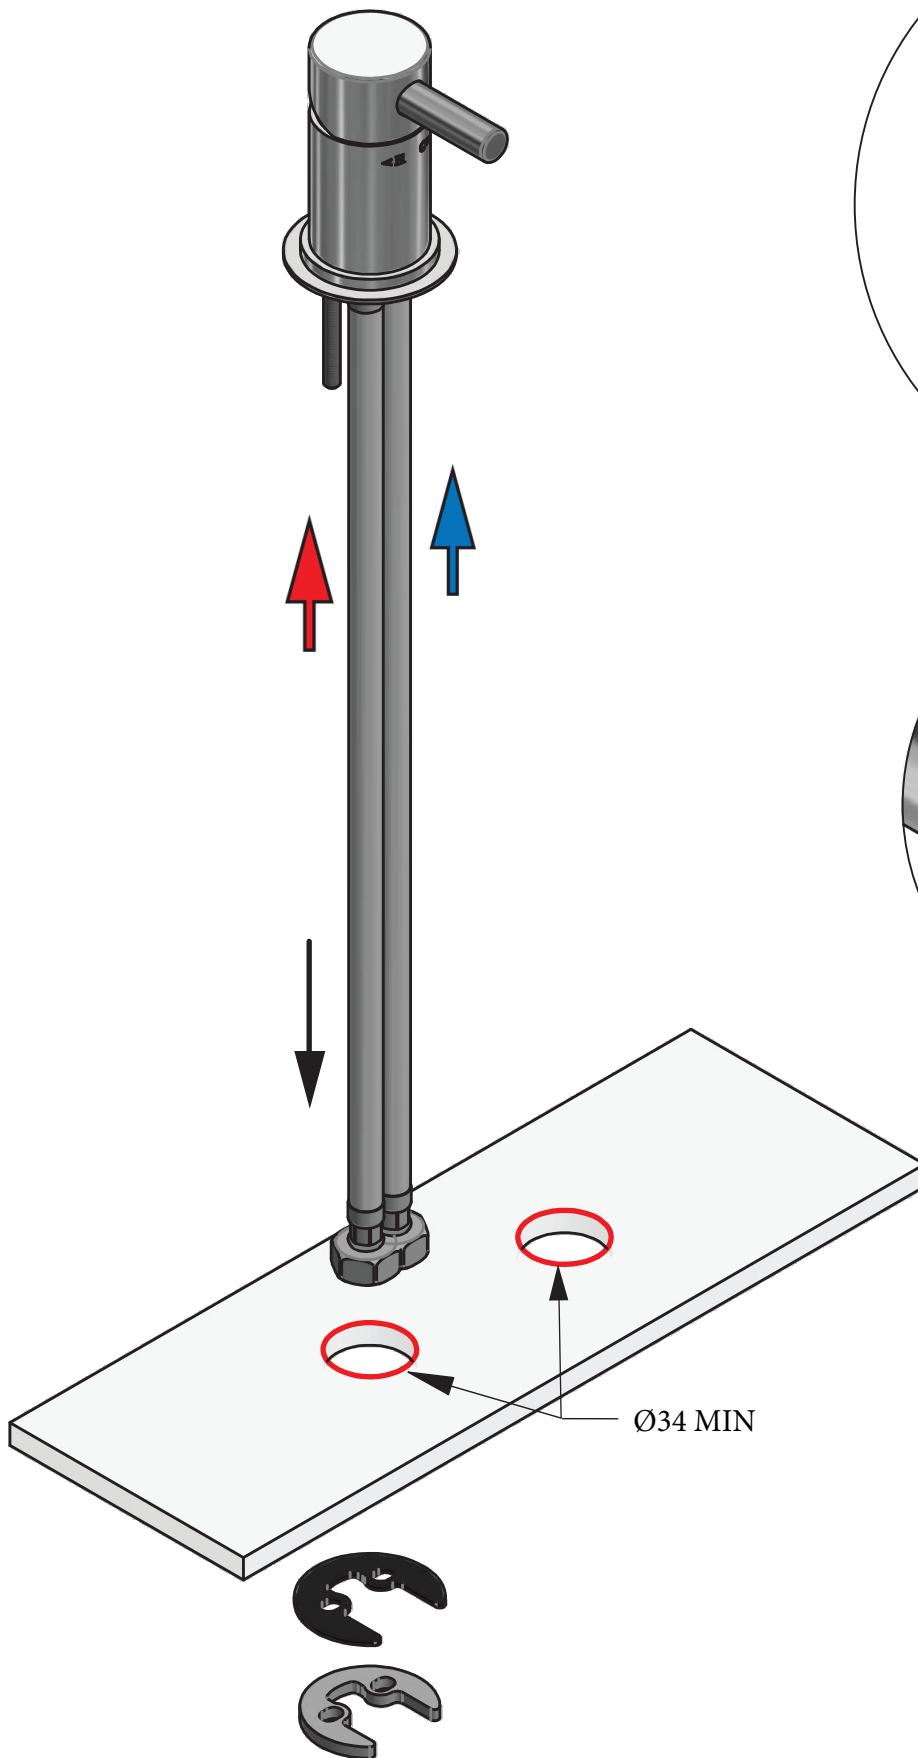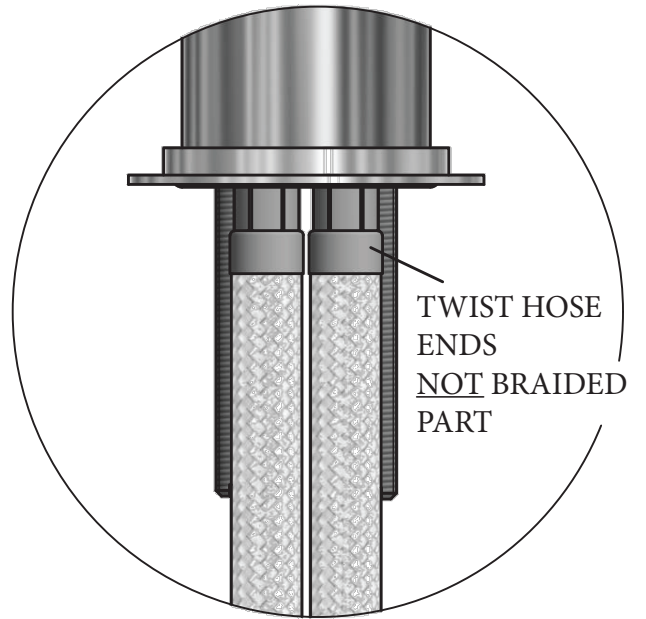


INSTALLATION 2.

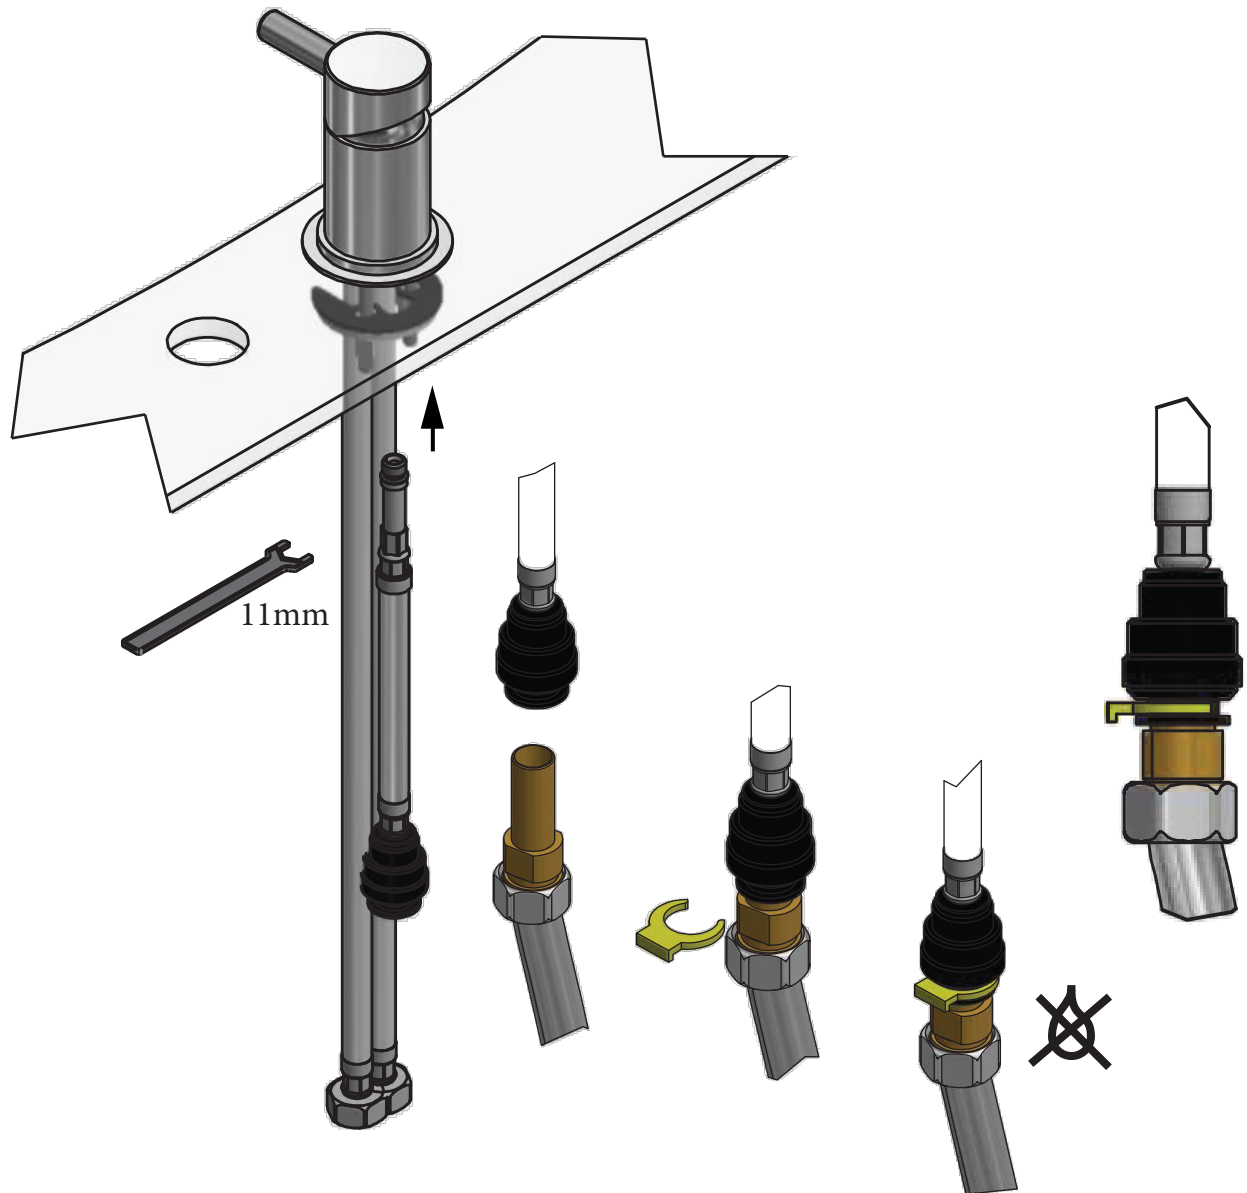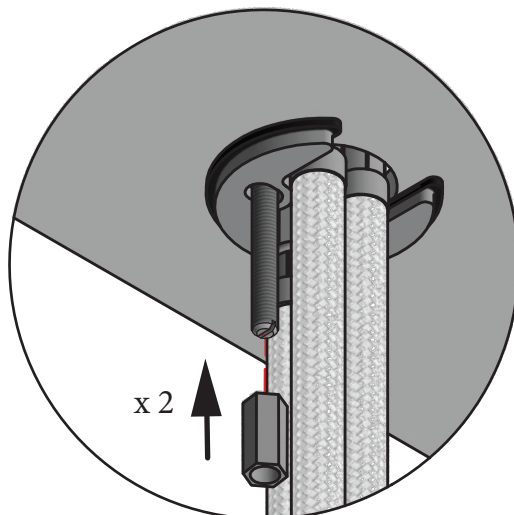


INSTALLATION 3.

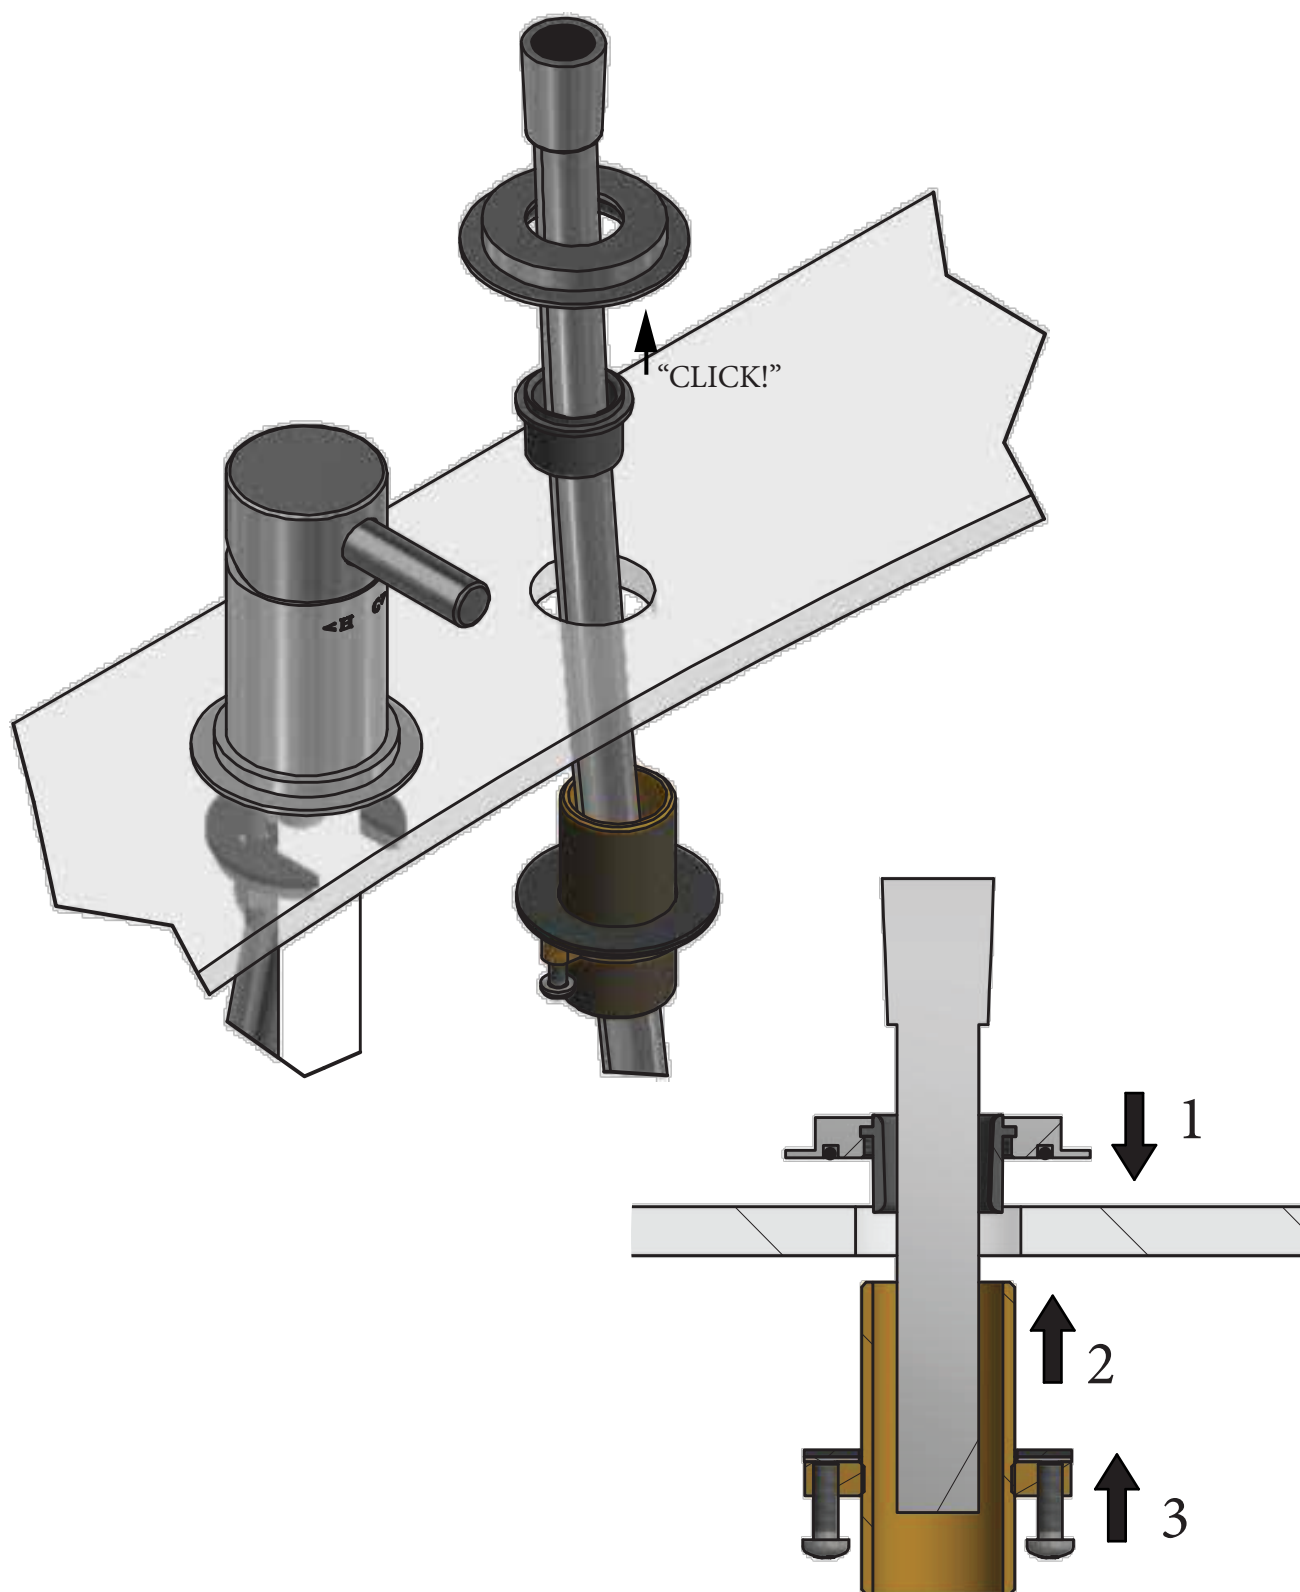


INSTALLATION 4.

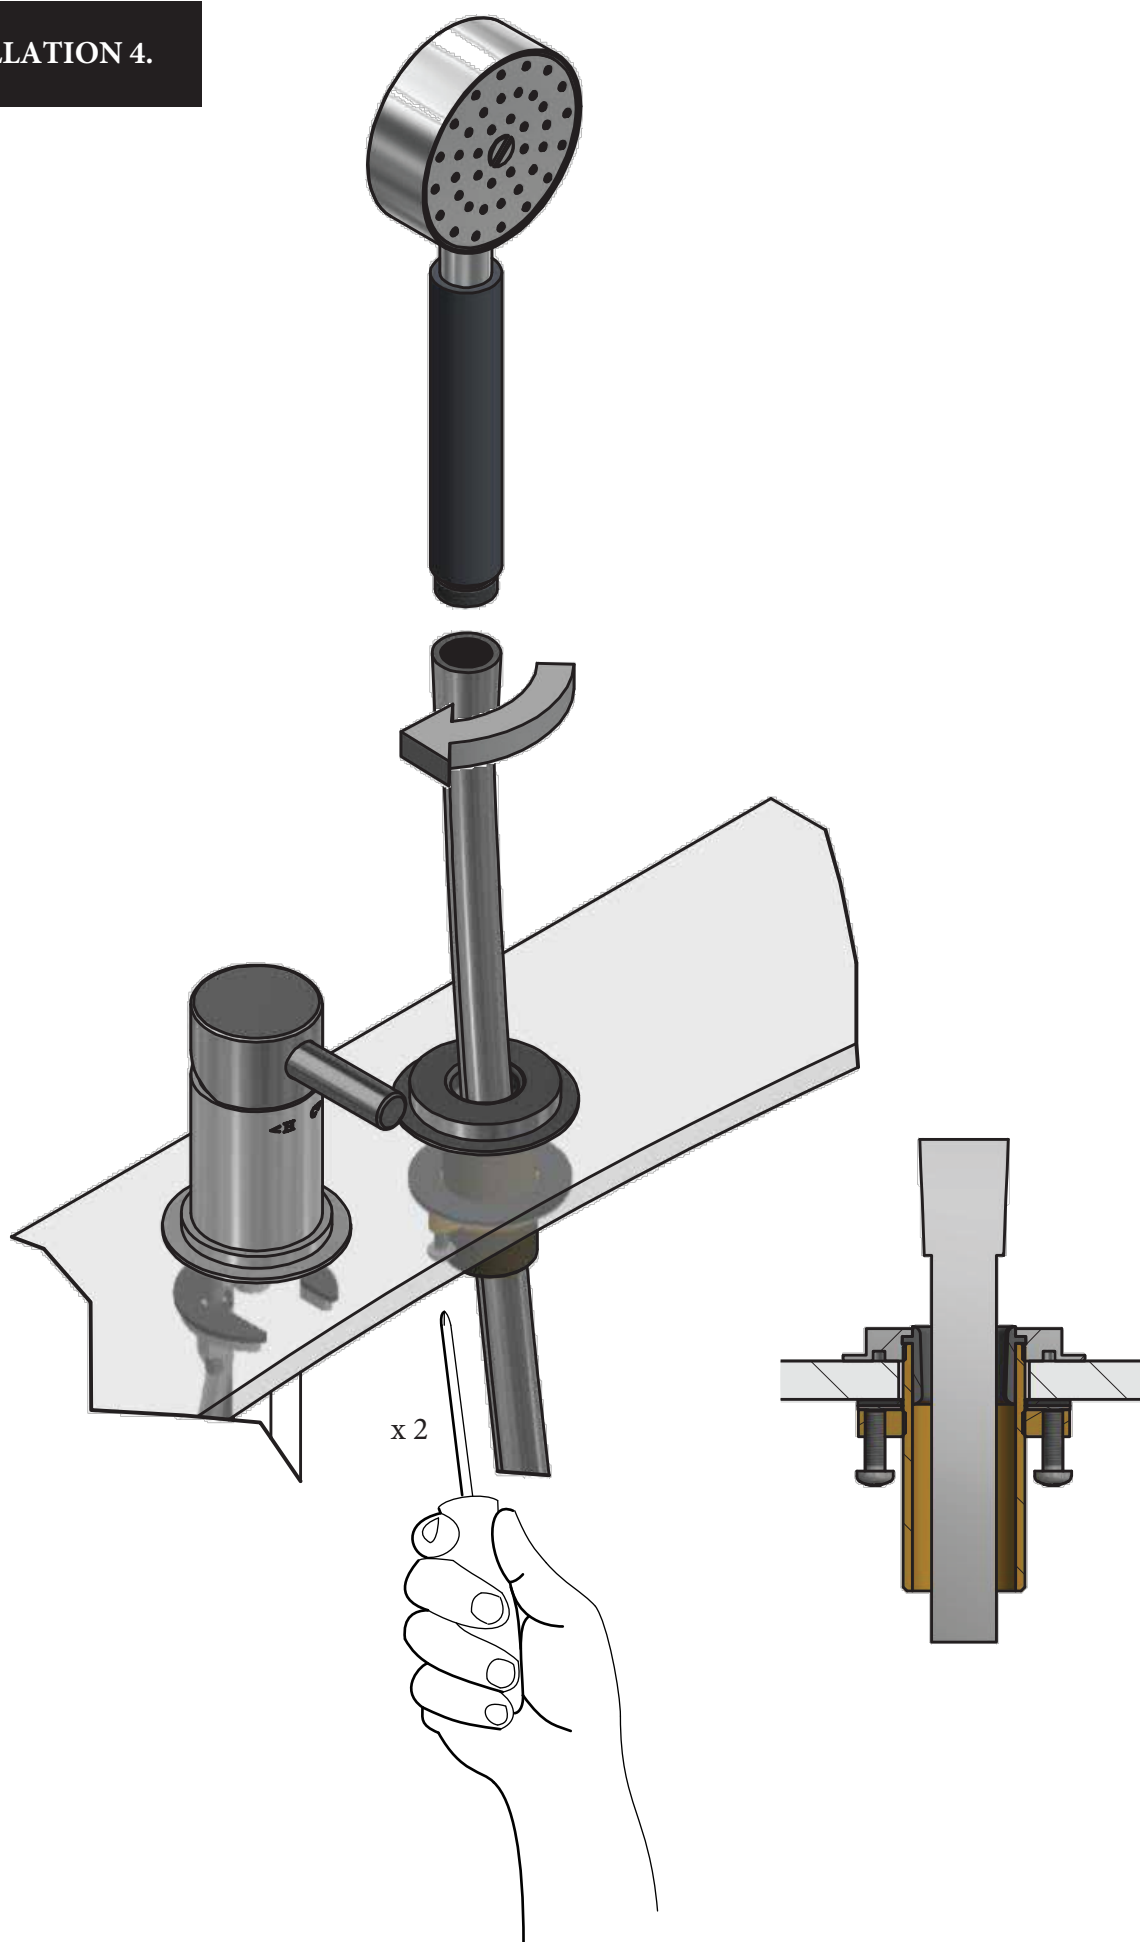

MAINTENANCE 4.

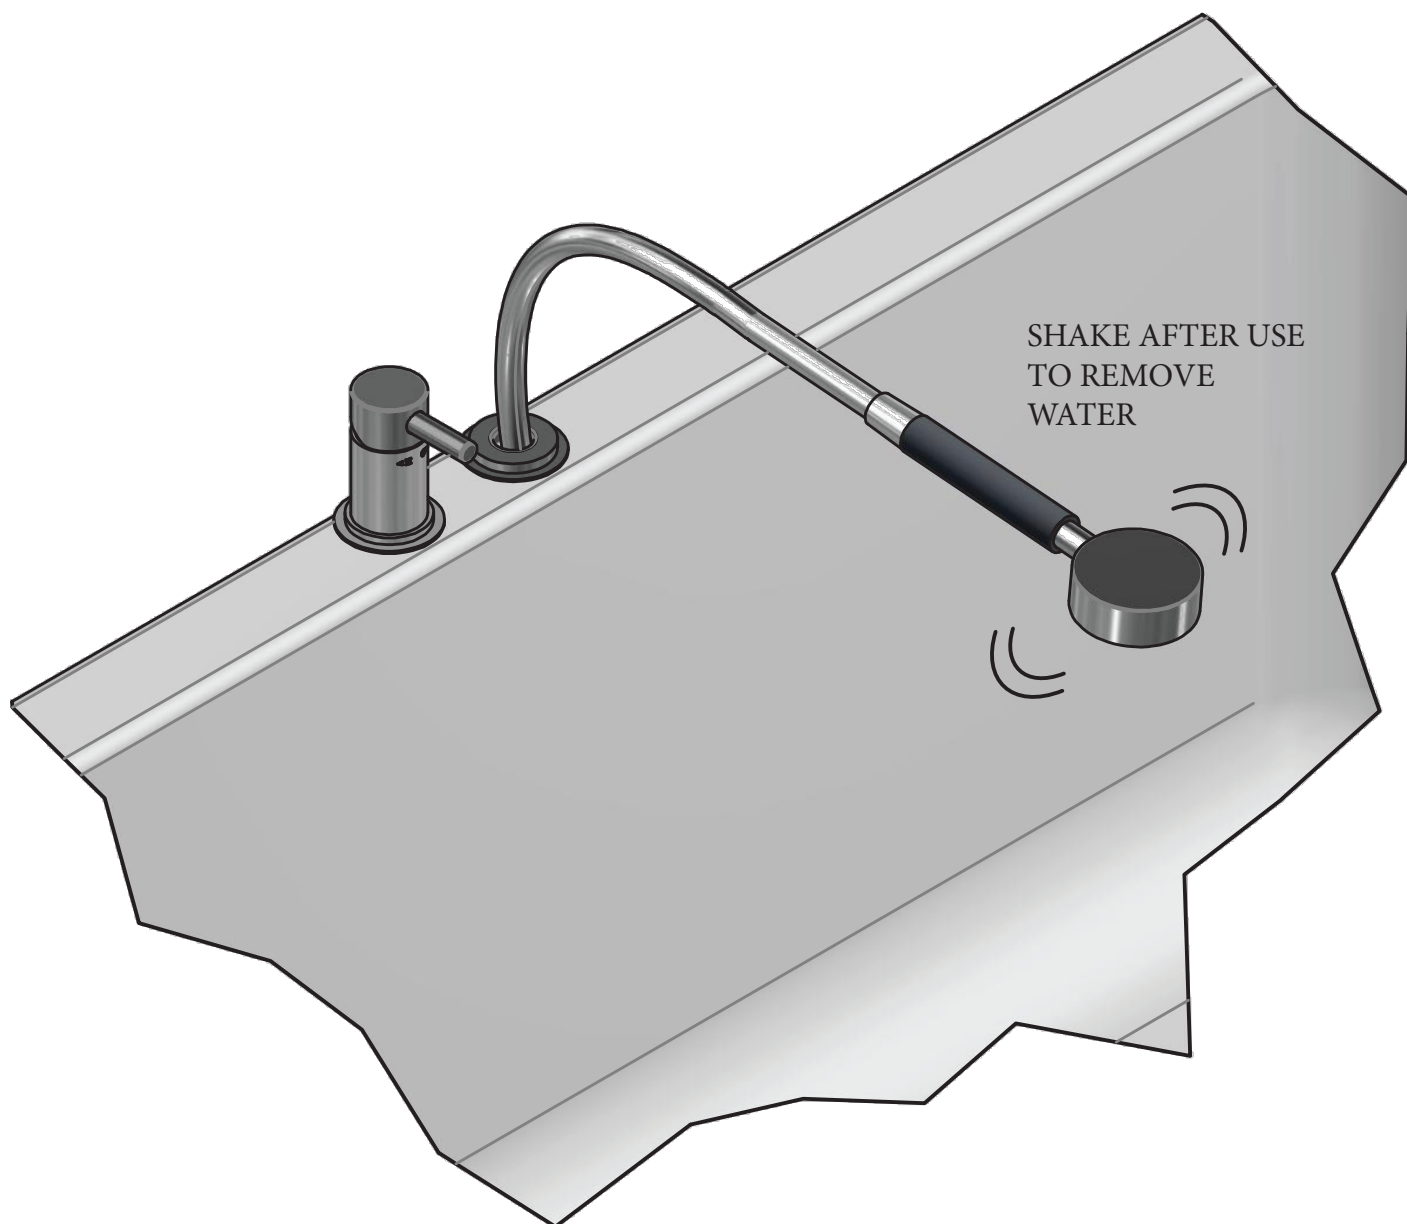

PARTS LIST

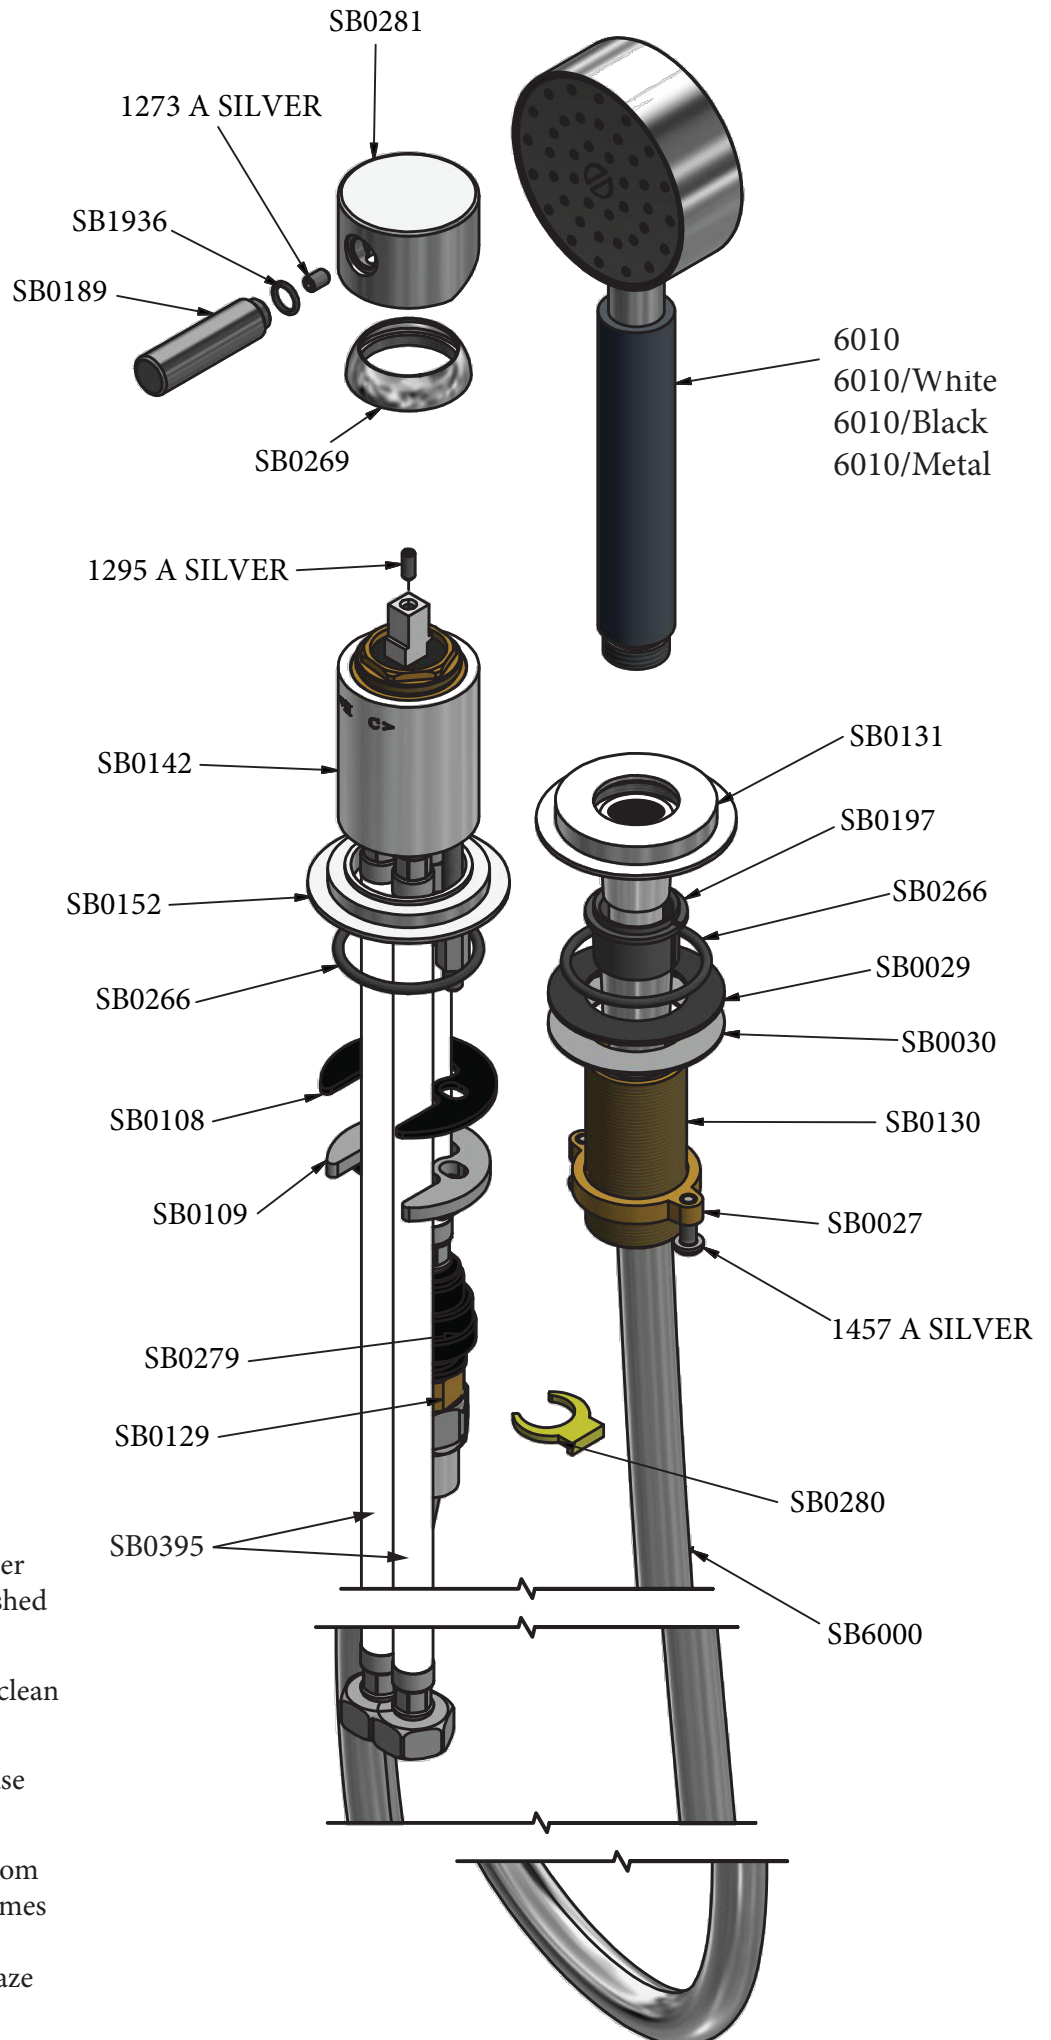

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.