# SWADLING
## BRASSWARE

INSTALLATION INSTRUCTIONS

Illustrious Shower Brace with Deluge

9872100OOX and 9872300OOX (with Robe Hook)



## IMPORTANT INSTALLATION INFORMATION


- Before Installation, please check all parts against the parts list on the back page of this booklet.
- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Swadling Brassware for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.


Swadling Brassware, Churchward Road, Yate, Bristol, BS37 5PL


**Telephone:** 01454 322888 **Email:** techsupport@swadlingbrassware.co.uk

## GENERAL DIMENSIONS & ADJUSTMENT RANGE

**IMPORTANT**
READ INSTRUCTIONS IN FULL
BEFORE STARTING JOB!

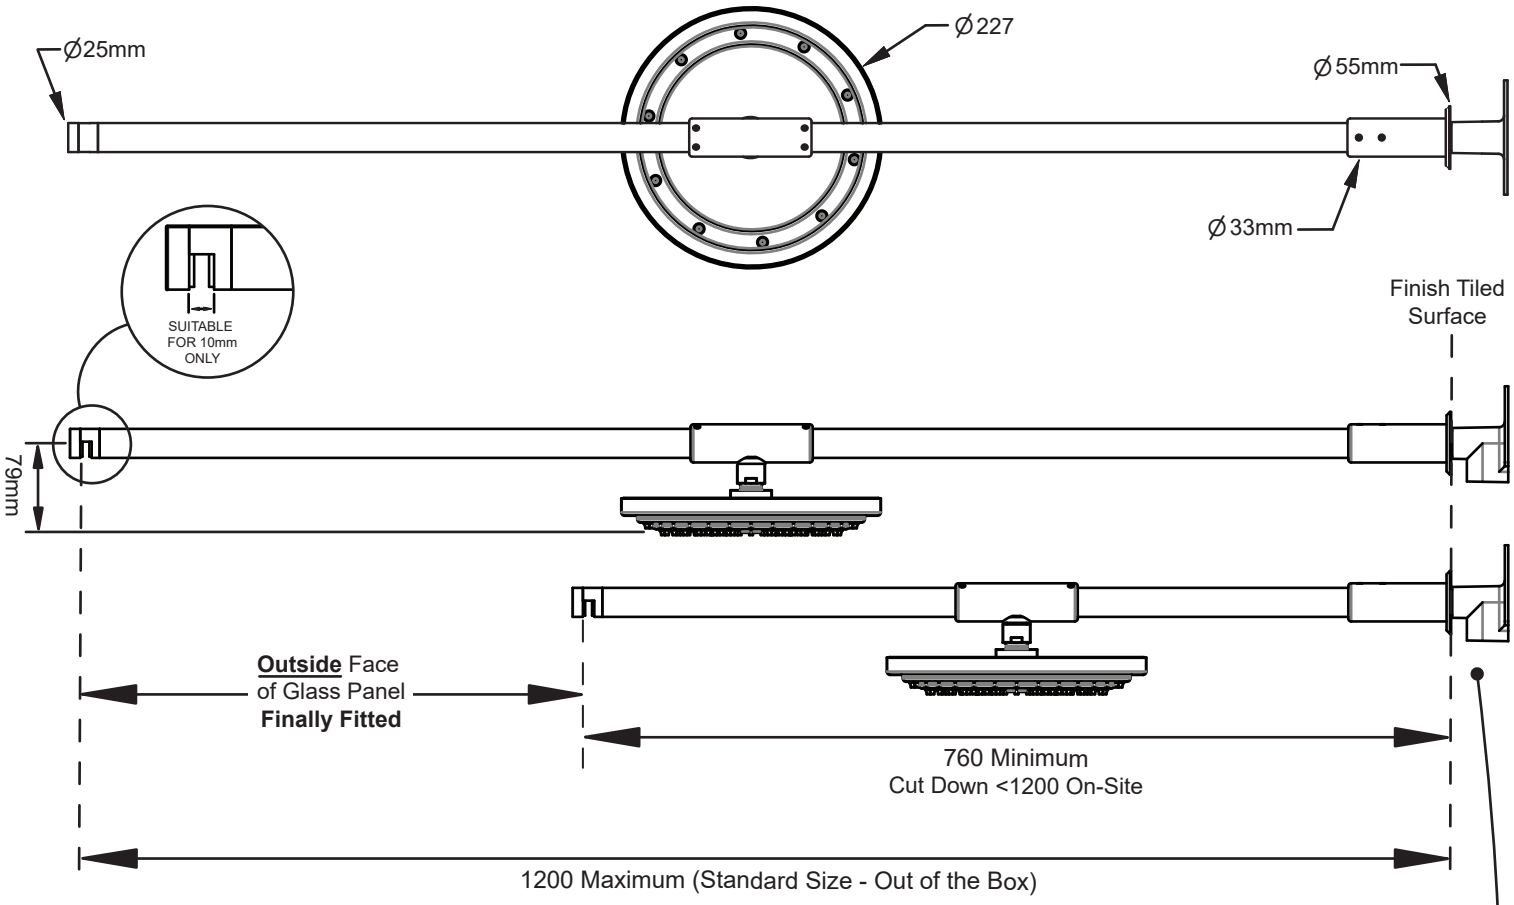

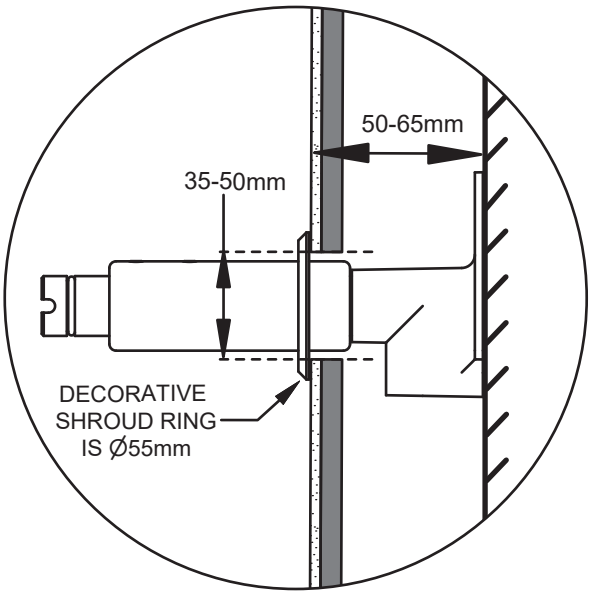


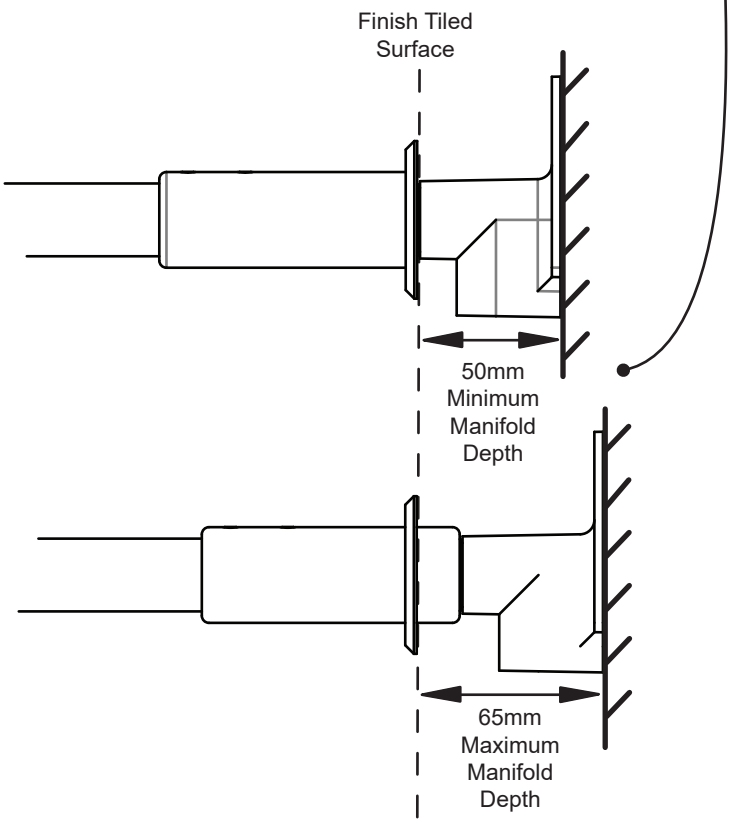
# SETTING OUT AND FIRST FIX PLUMBING

SHOWER BRACE CAN ACCOMMODATE ANY DEPTH FROM 1200mm (MAX) TO 760mm (MIN): THE SHOWER BRACE TUBES ARE CUT-DOWN TO SUIT ON SITE LATER. IMPORTANT GET THE FINAL MEASUREMENT ONCE PANEL IS INSTALLED.

SHOWER BRACE AND DESIRED SHOWER HEAD LOCATION NEEDS TO BE CONSIDERED AT THIS POINT. THIS HAS DIRECT RELATIONSHIP TO THE MANIFOLD PLACEMENT AND SIZE & SHAPE OF GLASS PANEL TO BE INSTALLED.
IMPORTANT CONSULT CLIENT OR INTERIOR DESIGNER AND ENCLOSURE/PANEL INSTRUCTIONS. ENSURE DIAMETER OF CHOSEN SHOWER HEAD DOESN'T CLASH WITH WALL.



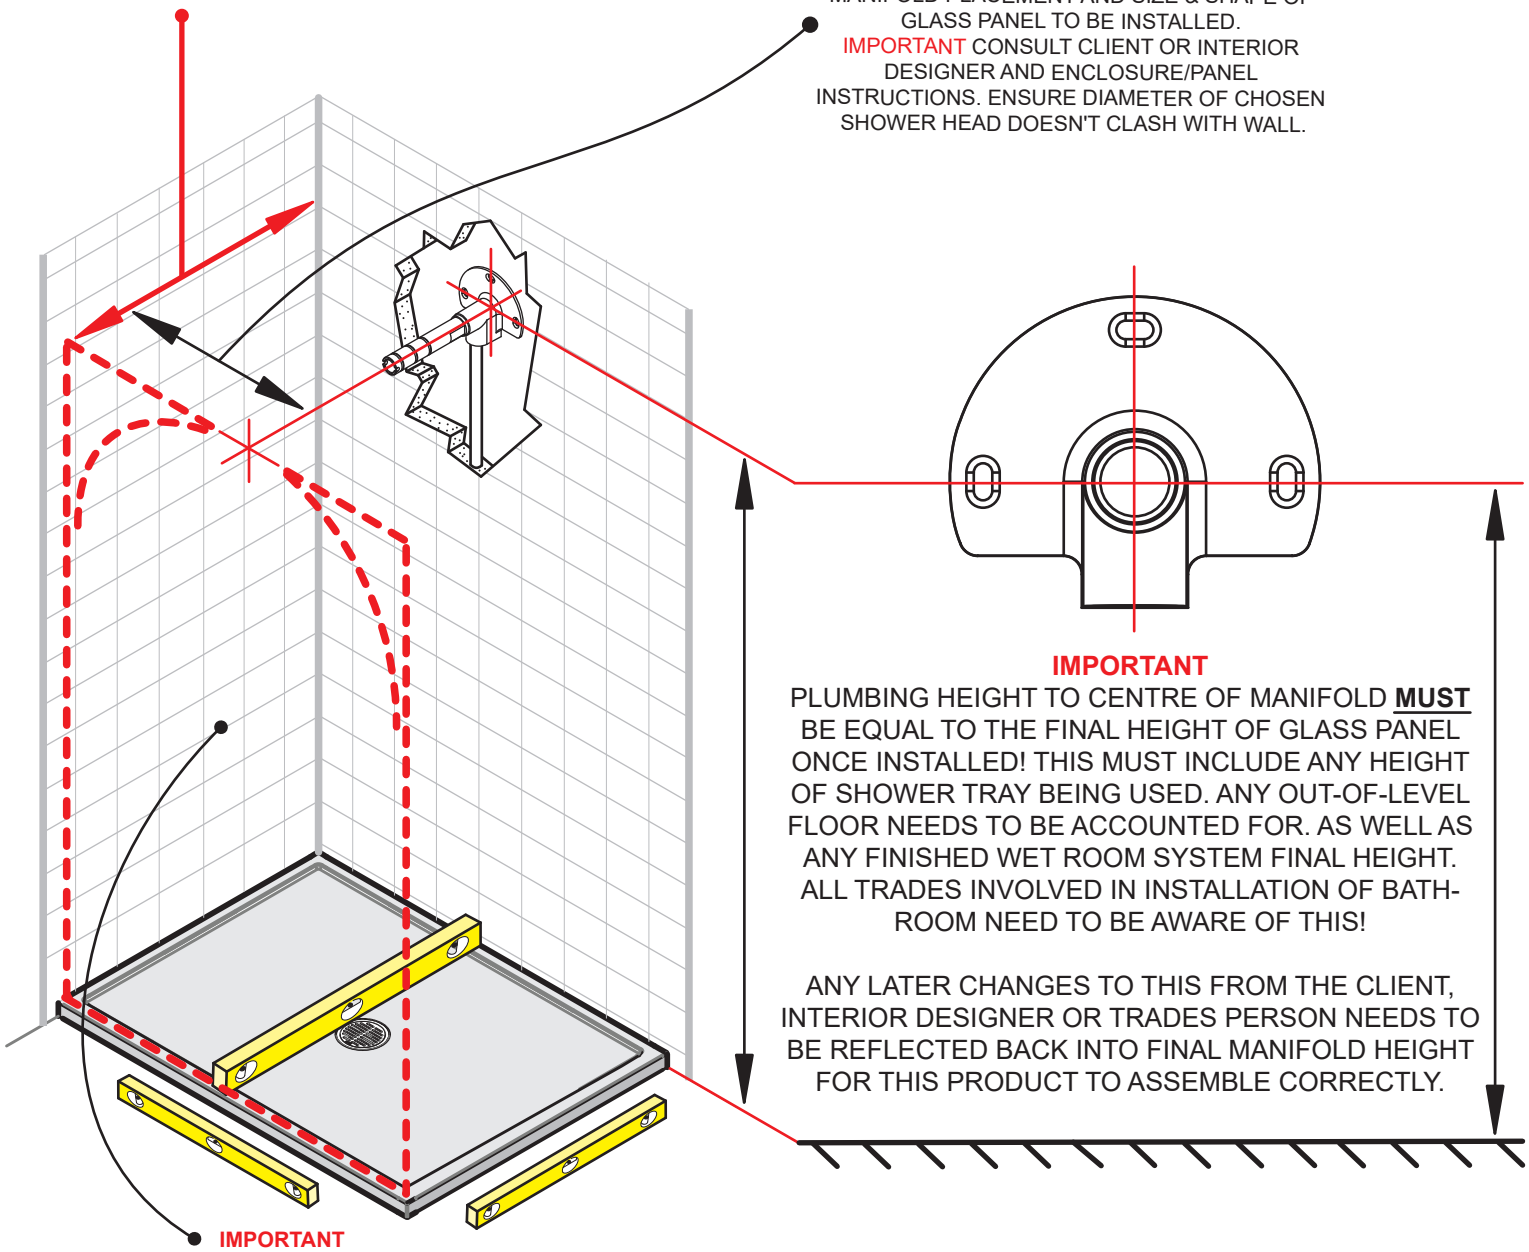

**IMPORTANT**


PLUMBING HEIGHT TO CENTRE OF MANIFOLD **MUST** BE EQUAL TO THE FINAL HEIGHT OF GLASS PANEL ONCE INSTALLED! THIS MUST INCLUDE ANY HEIGHT OF SHOWER TRAY BEING USED. ANY OUT-OF-LEVEL FLOOR NEEDS TO BE ACCOUNTED FOR. AS WELL AS ANY FINISHED WET ROOM SYSTEM FINAL HEIGHT. ALL TRADES INVOLVED IN INSTALLATION OF BATH-ROOM NEED TO BE AWARE OF THIS!


ANY LATER CHANGES TO THIS FROM THE CLIENT, INTERIOR DESIGNER OR TRADES PERSON NEEDS TO BE REFLECTED BACK INTO FINAL MANIFOLD HEIGHT FOR THIS PRODUCT TO ASSEMBLE CORRECTLY.


**IMPORTANT**


FULLY CONSULT SEPARATE FITTING INSTRUCTIONS FOR DESIGNATED SHOWER TRAY AND WET-ROOM PANEL.


# SETTING OUT AND FIRST FIX PLUMBING




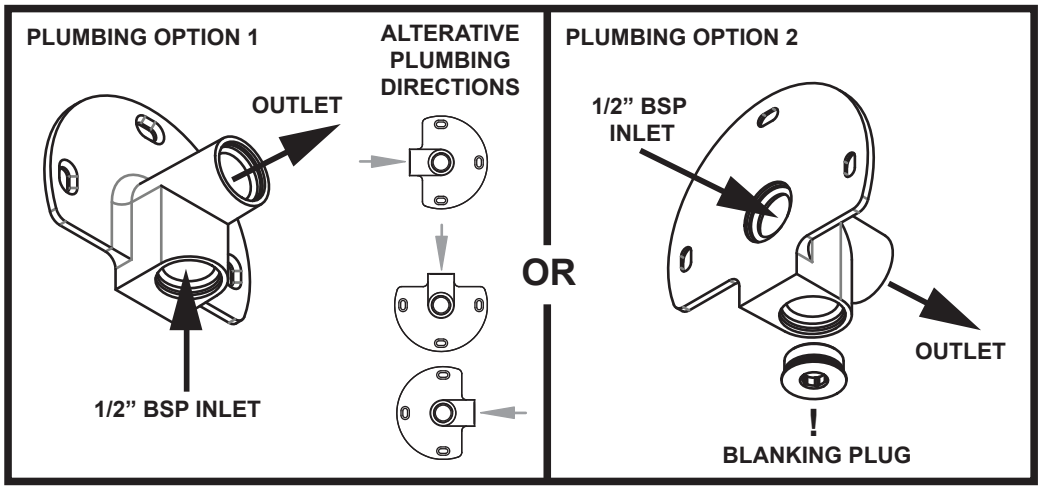


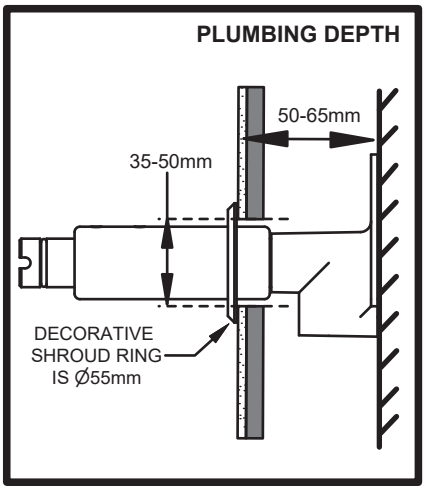
# INSTALL WET ROOM PANEL AND MEASURE

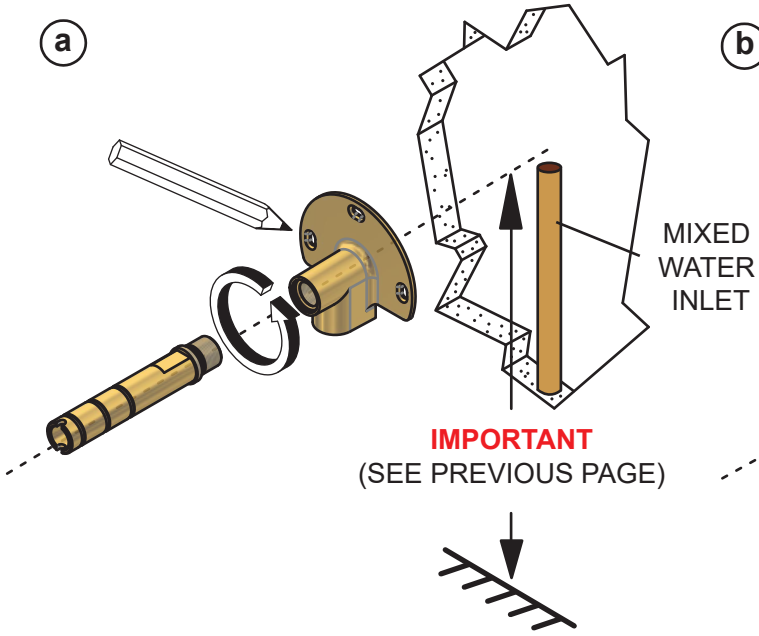
ONCE WET-ROOM PANEL IS FITTED
CONFIRM THE DEPTH MEASUREMENT TO
PROCEED TO NEXT STAGE!

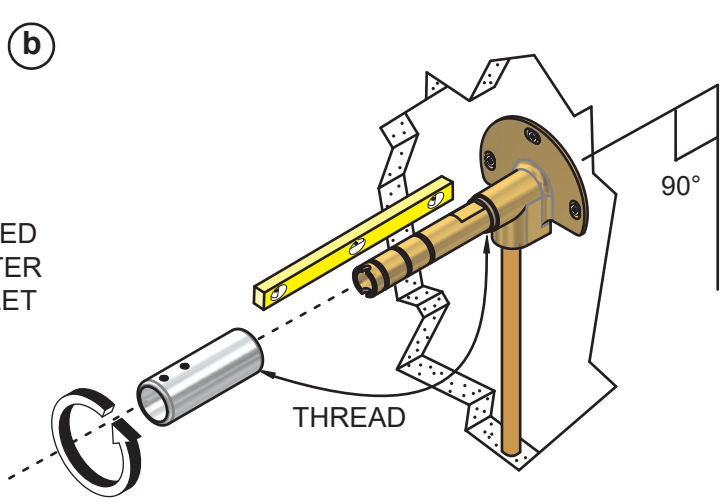
MEASURE OUTSIDE FACE OF GLASS TO TILLED WALL.

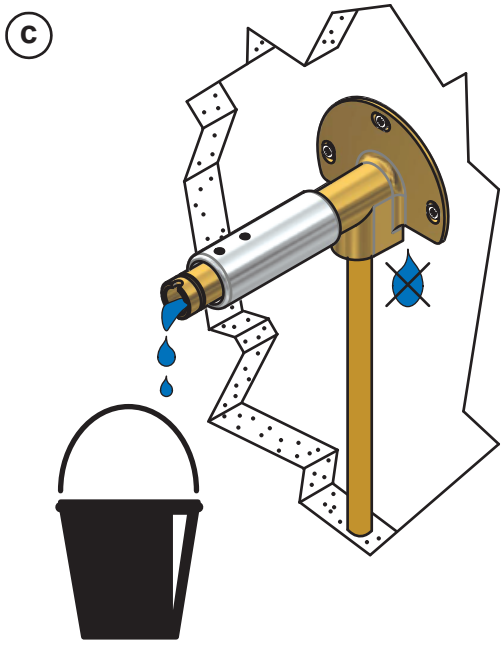MEASURE IN GENERAL LOCATION OF
ALREADY FITTED SPIGOT AND BRACKET
FOR BEST RESULTS.

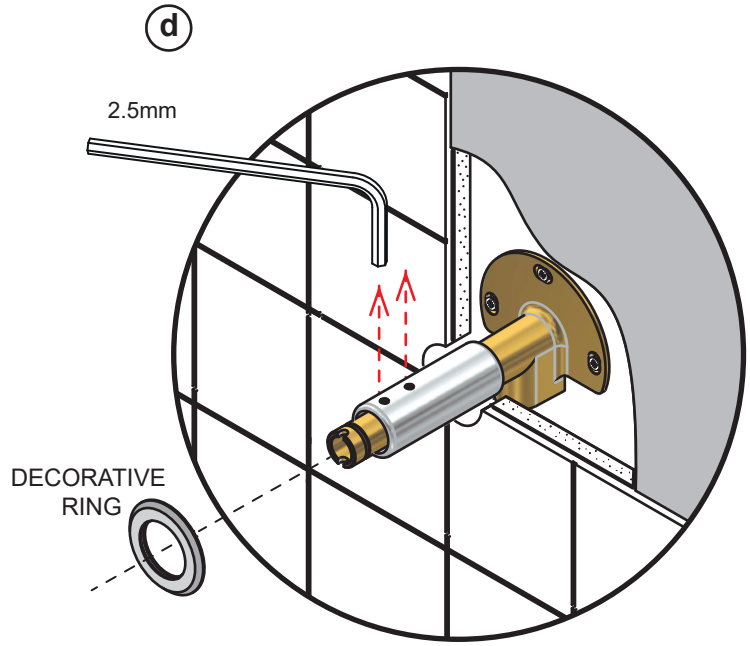MAKE A NOTE OF THIS MEASUREMENT HERE!
WE CALL THIS CUSTOM DEPTH (A)

SEE SEPARATE
FITTING INSTRUCTIONS
TO INSTALL ENCLOSURE

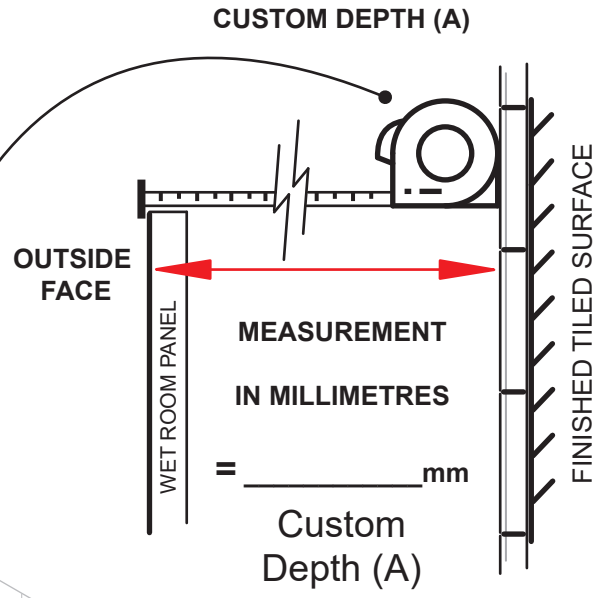

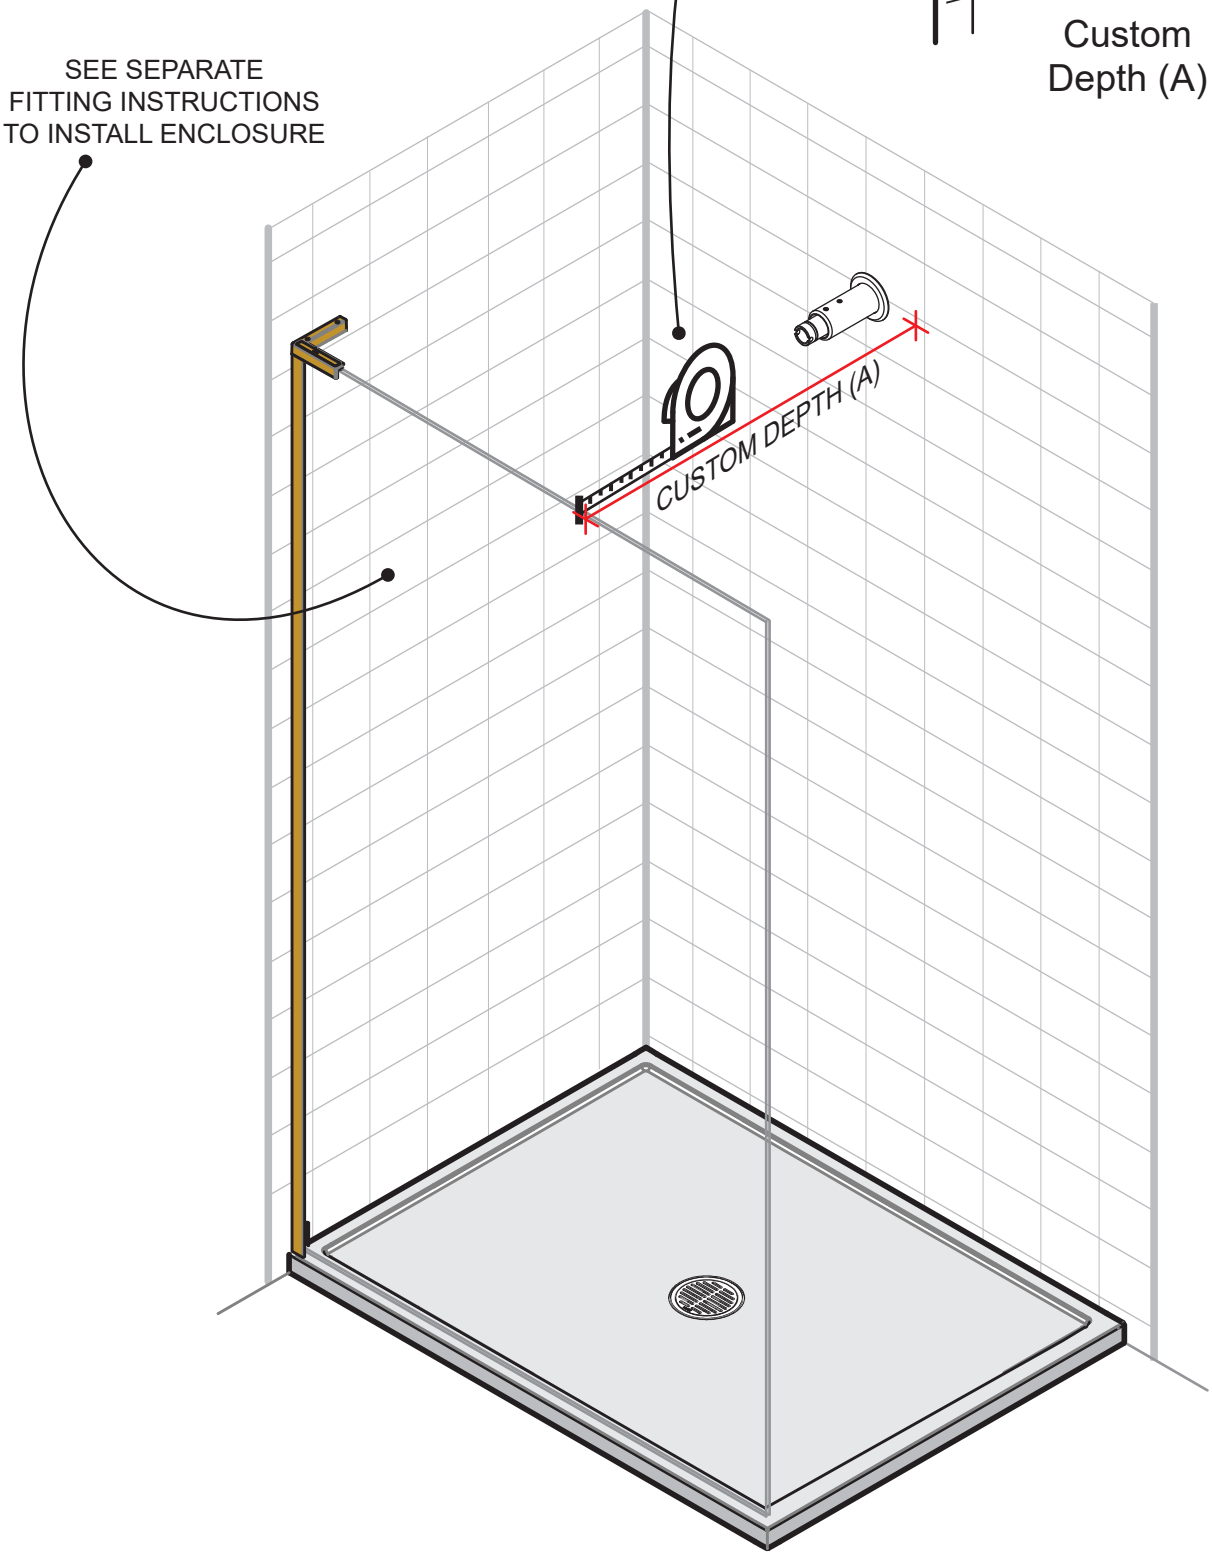
## CALCULATING CUTTING DOWN SHOWER BRACE TUBES


**Brace is supplied at 1200mm. Cutting of both tubes is required.**
**Deluge head is always central.**

**A =** .....
**Cut length to WET side =** Half (A) - 84mm **=** .....
**Cut length to DRY side =** Half (A) - 59mm **=** .....

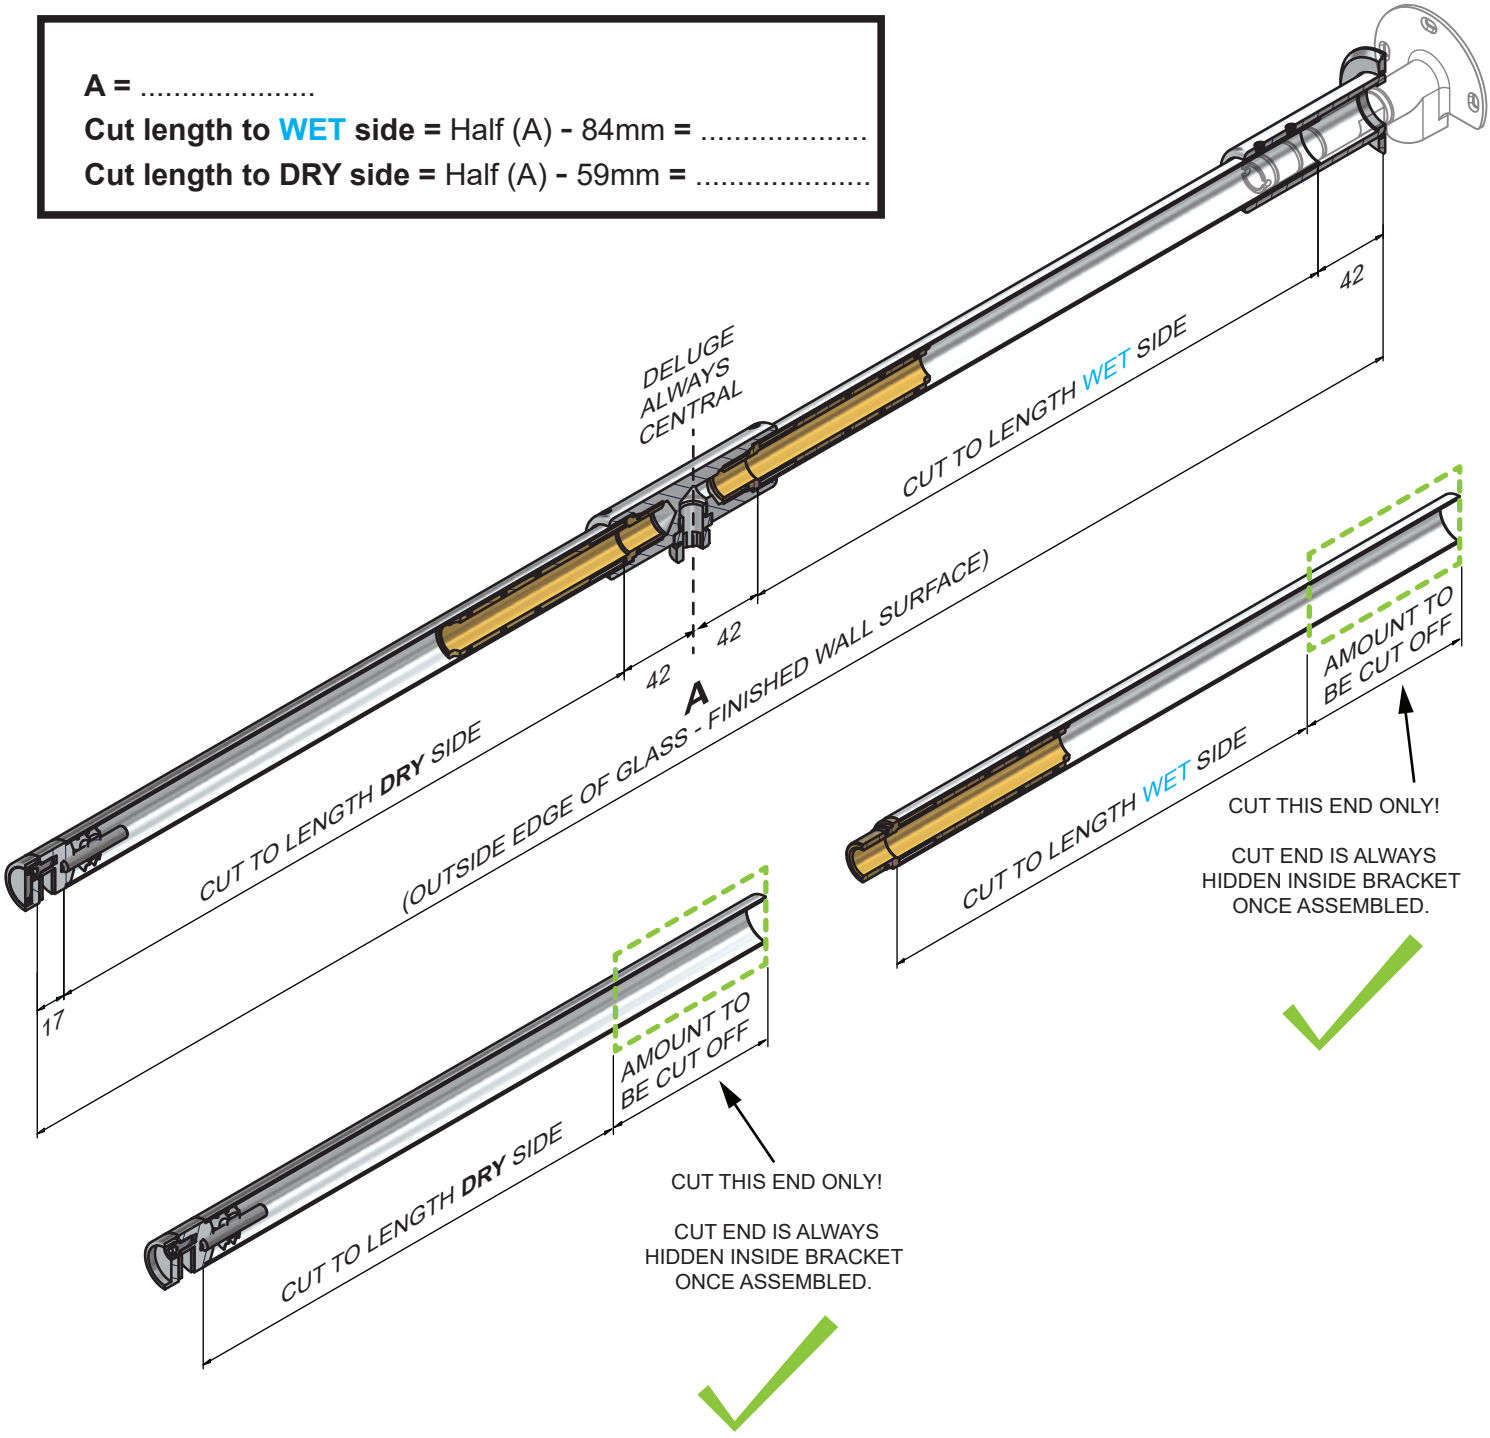



**Important:** Remove swarf & clean. De-burr with an appropriate de-burring tool - similar to copper pipe de-burring tool and/or suitable grit paper. Remove swarf & any debris from inside.


# WATER BRACE ASSEMBLY

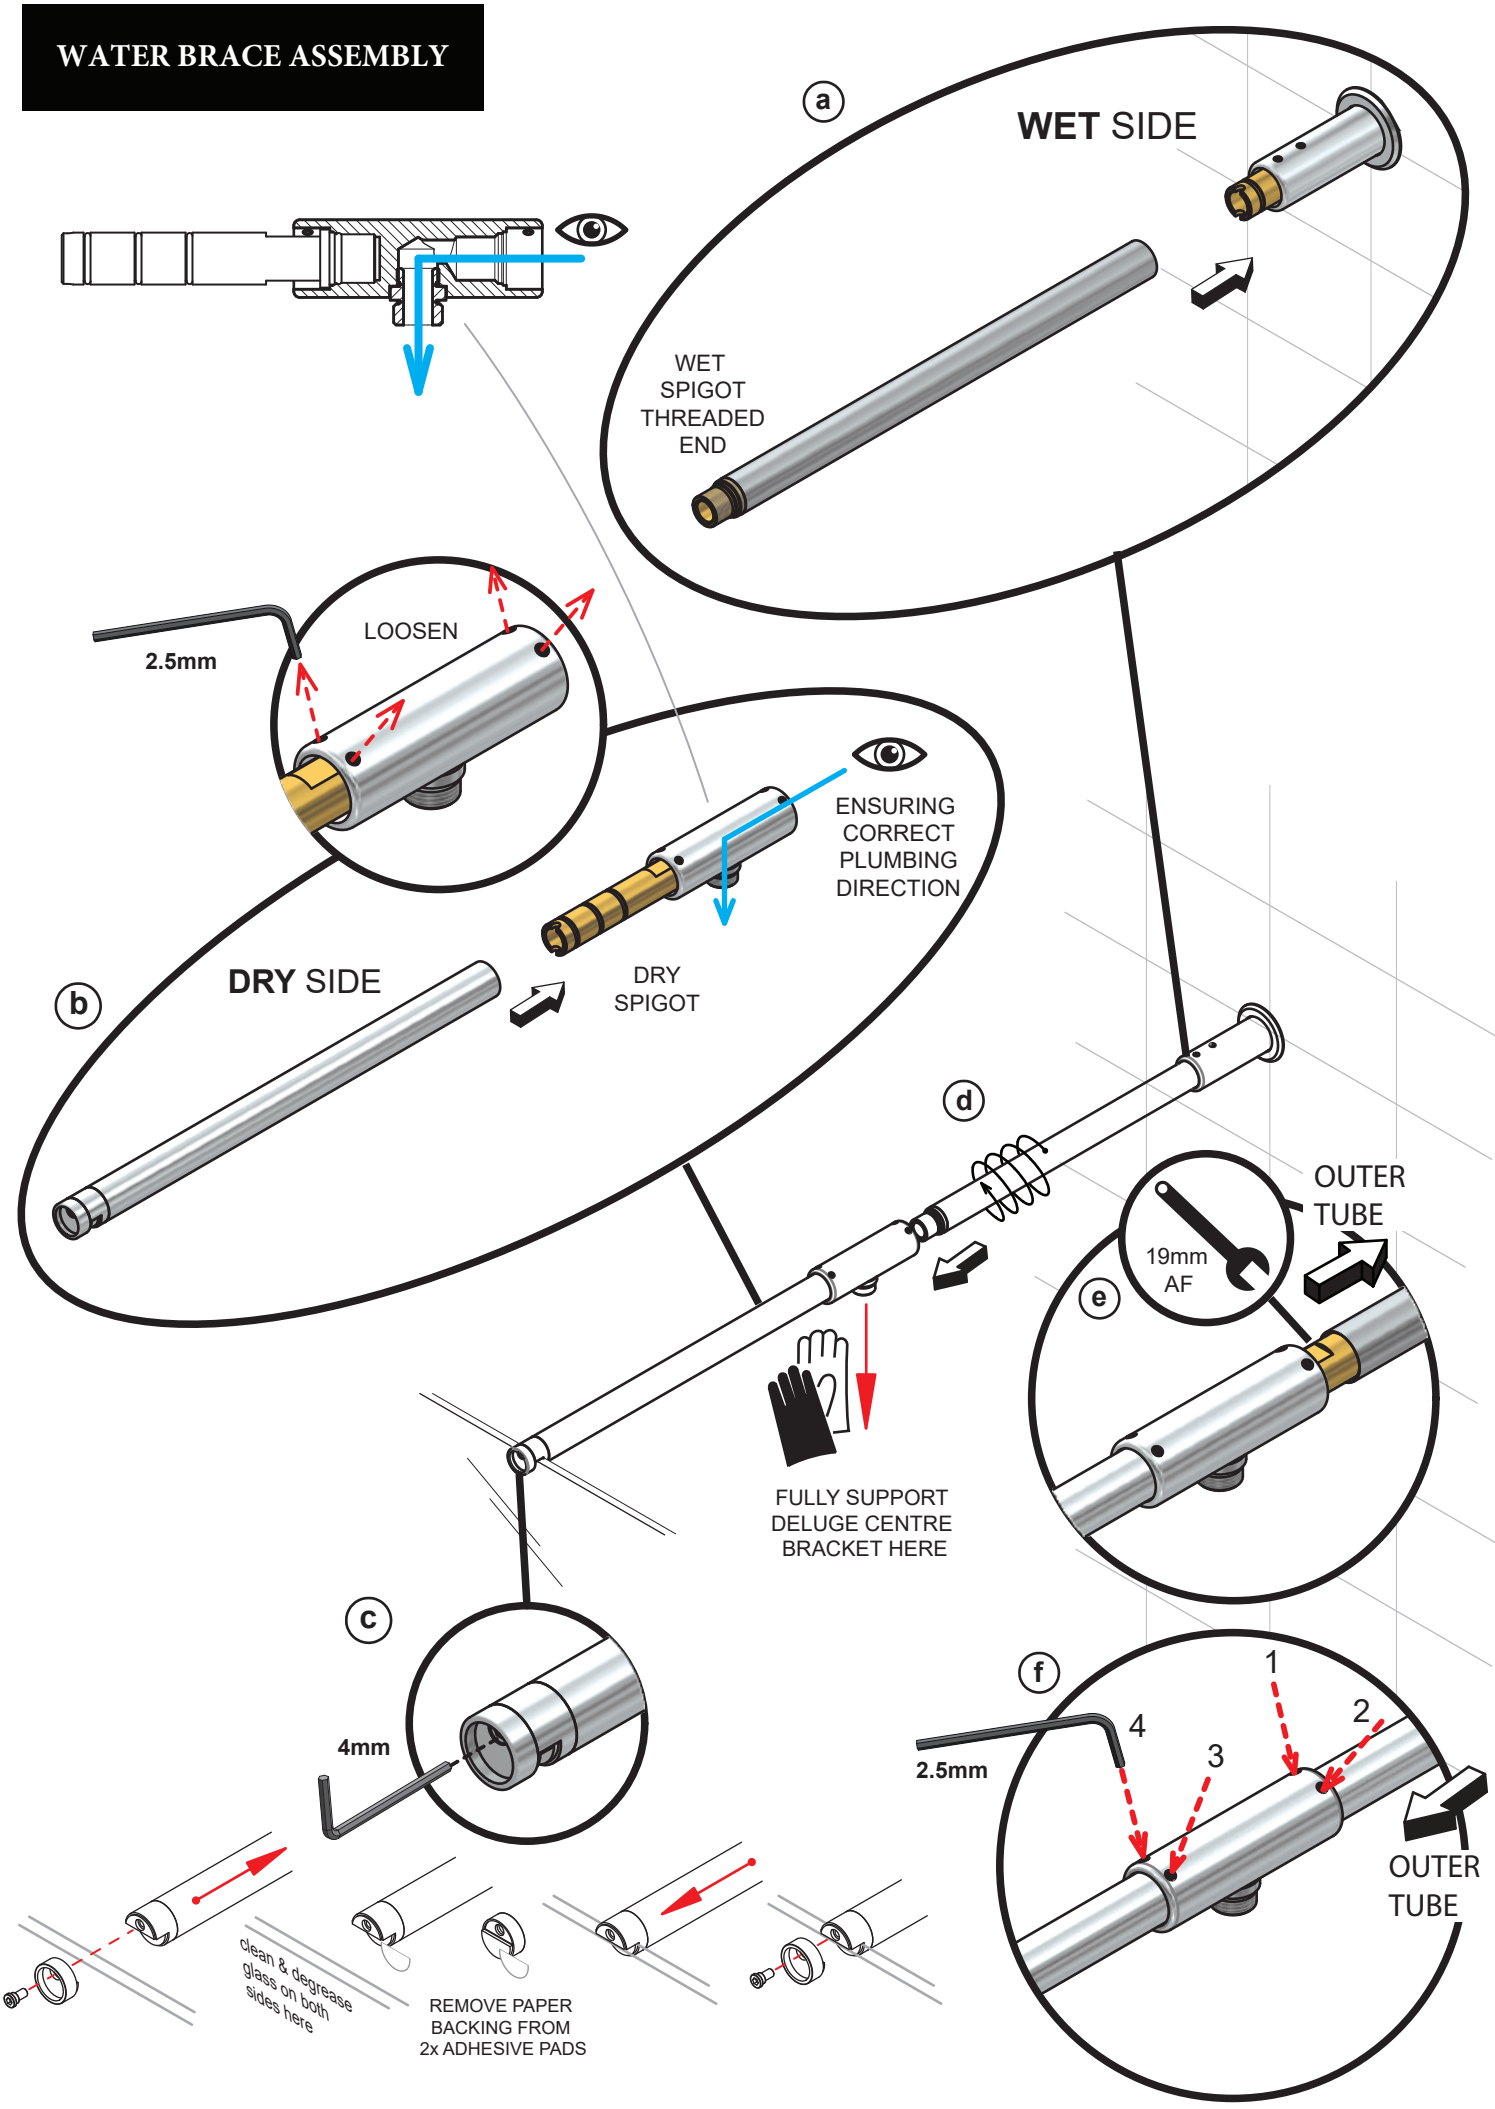

# DELUGE FITTING & COMMISSION

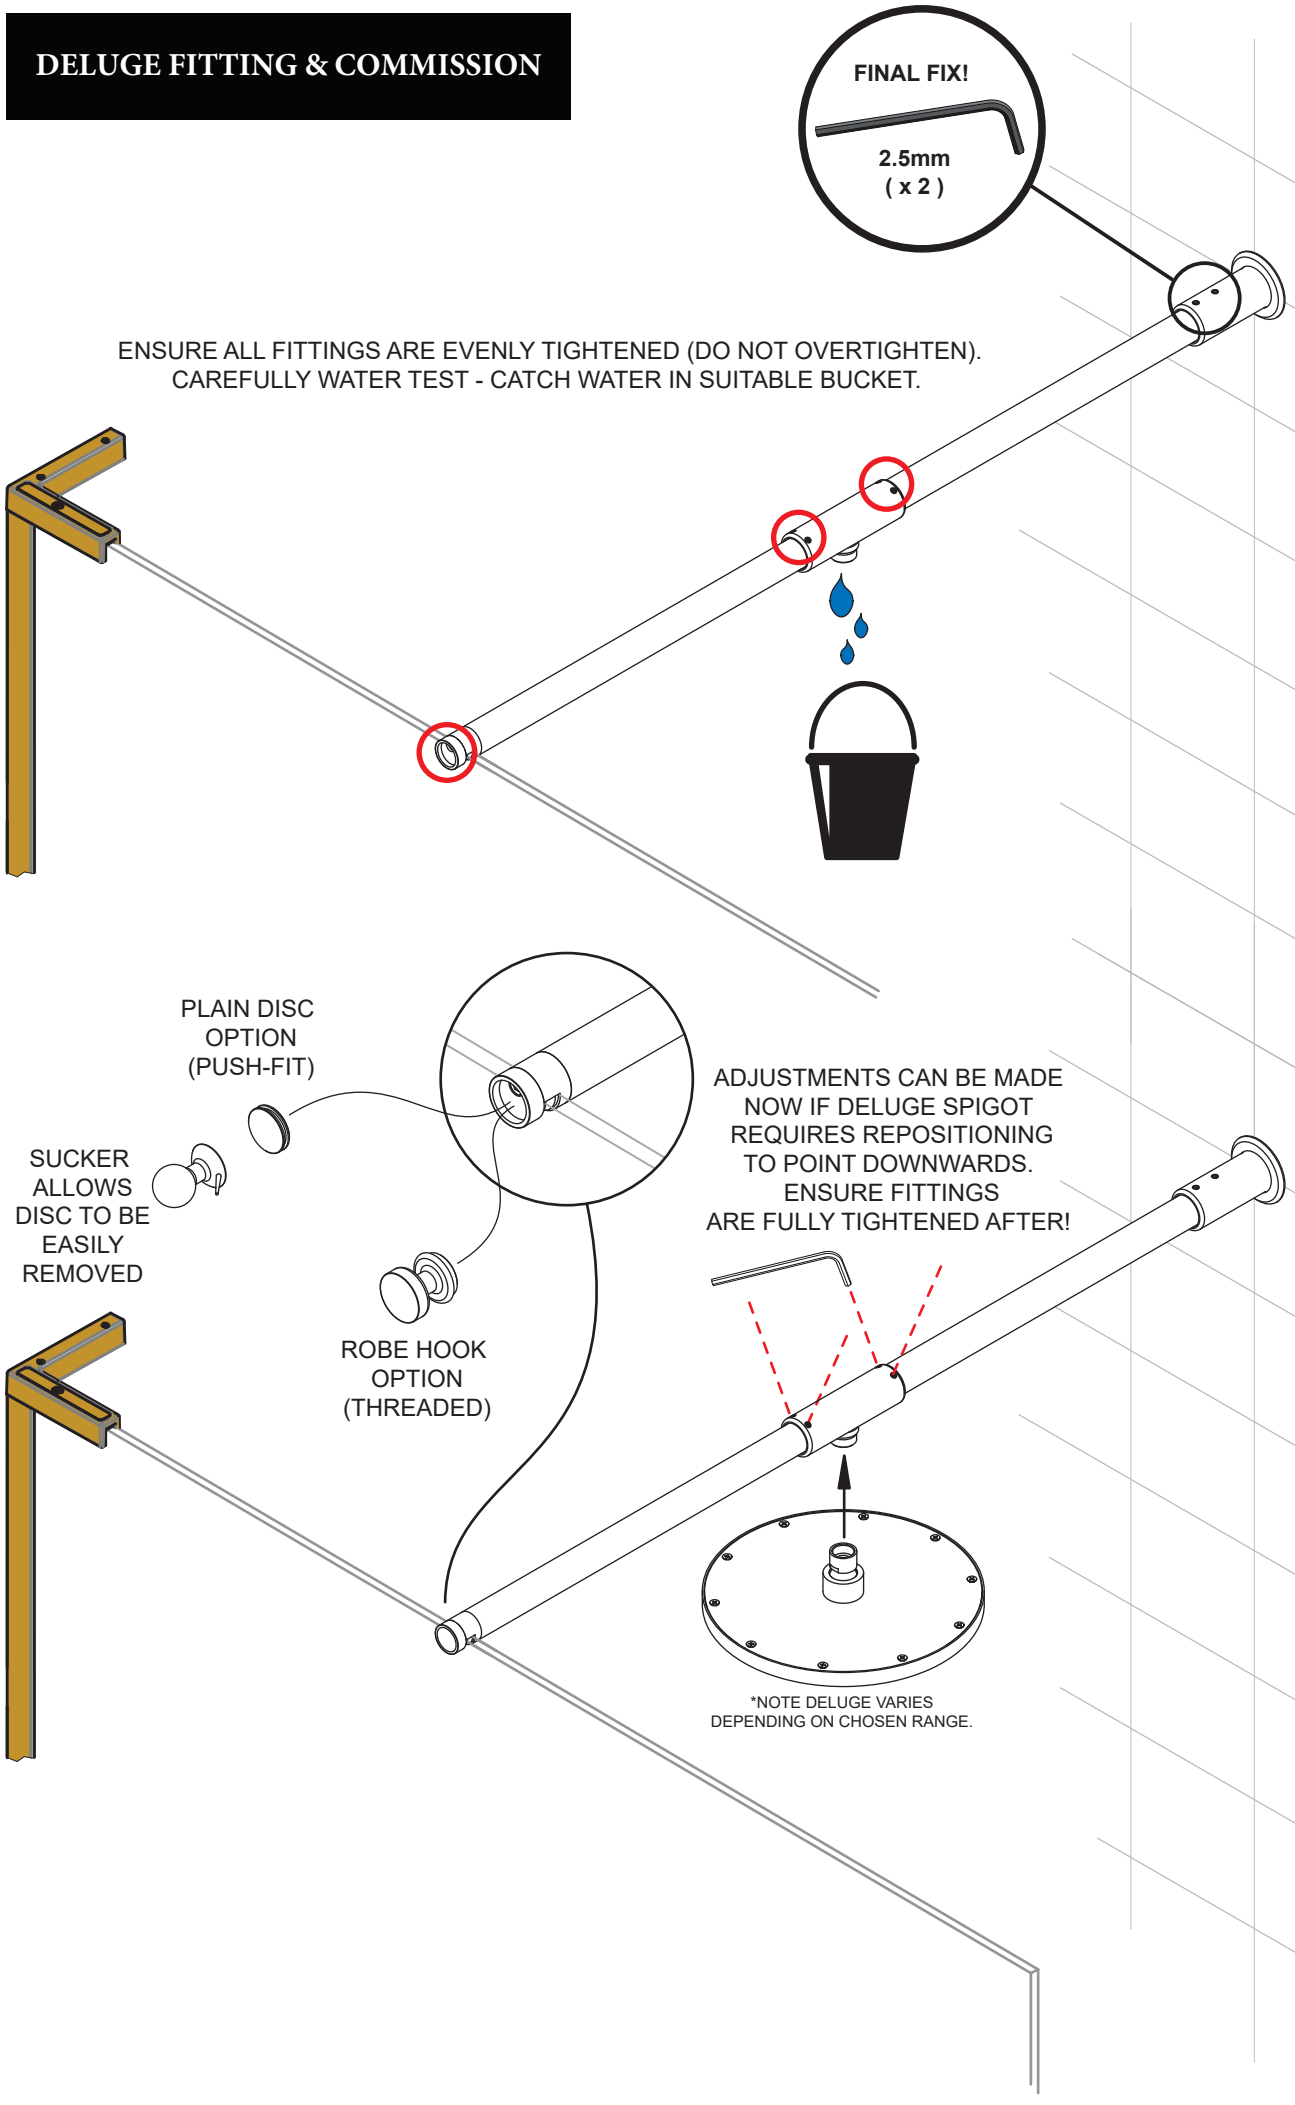

**FINISH**

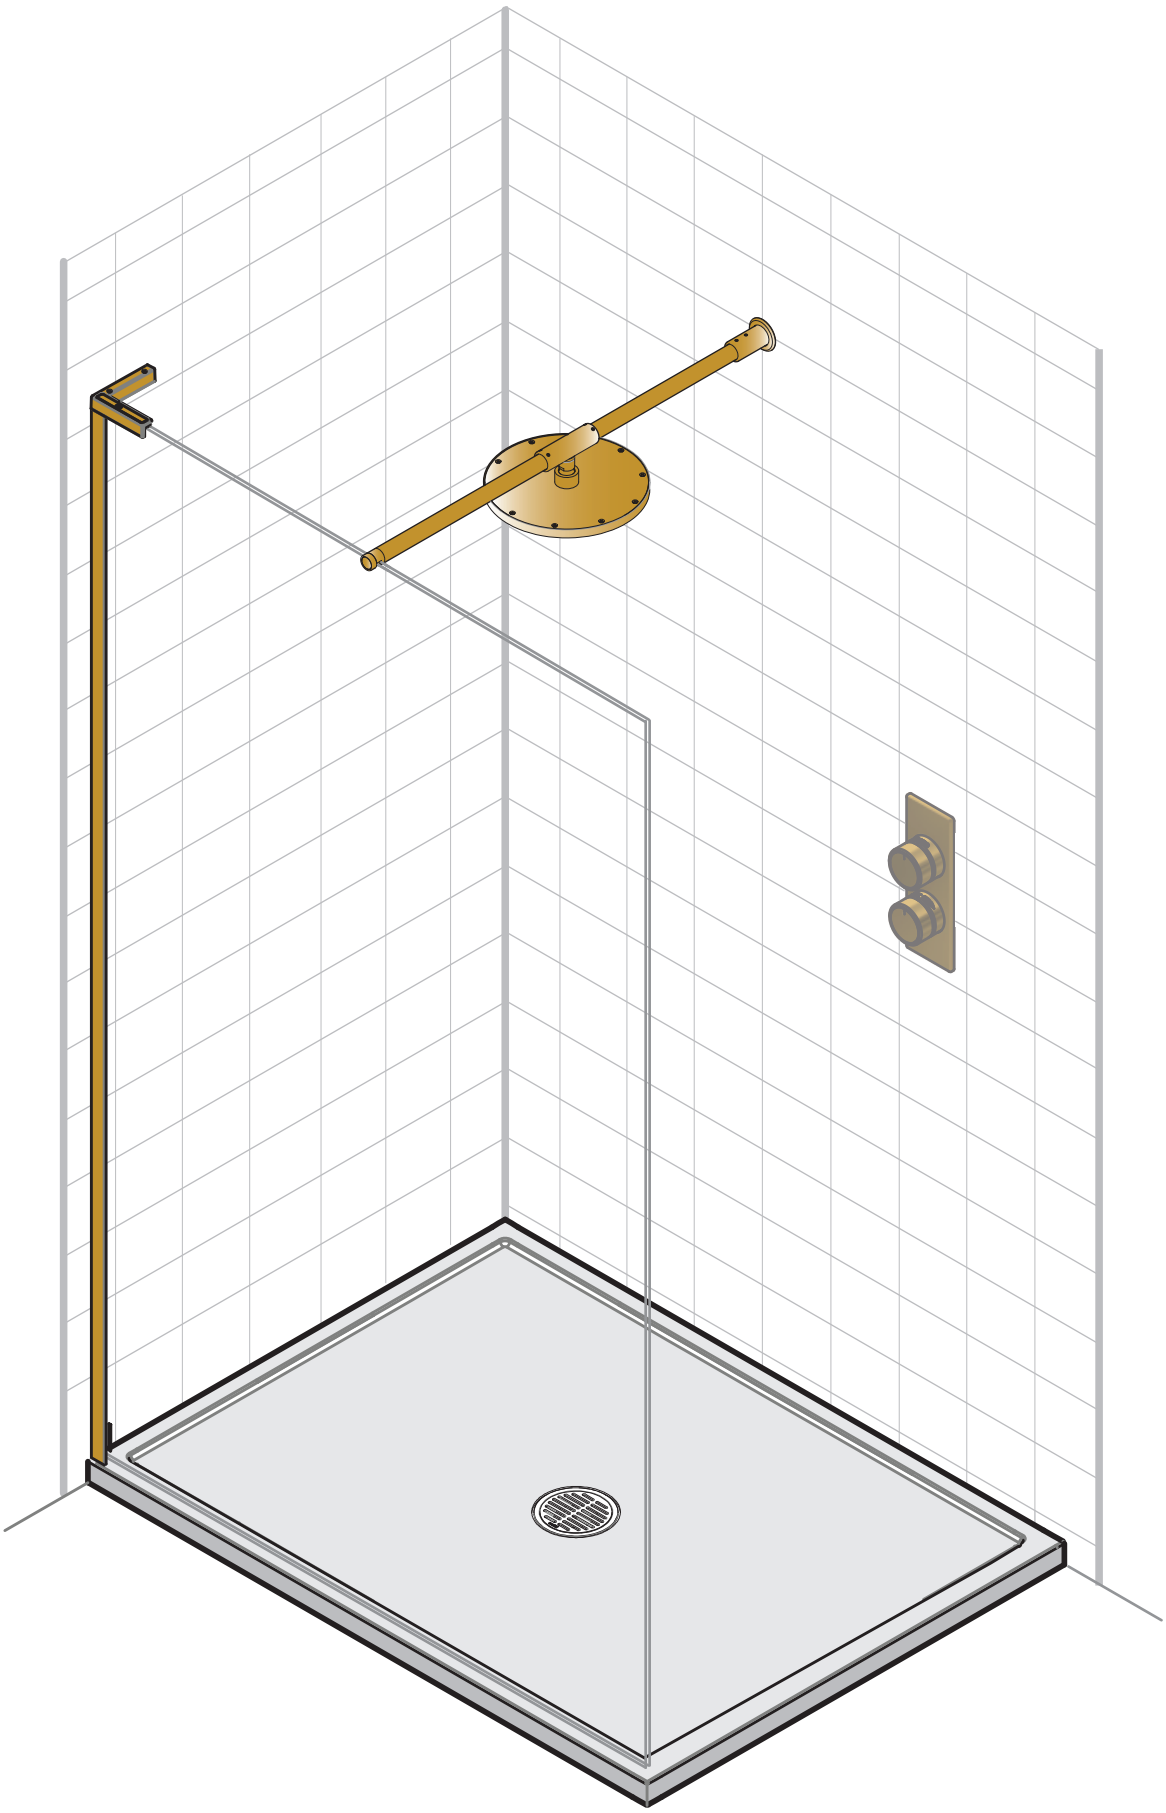


## NOTES & CALCULATIONS

## NOTES & CALCULATIONS

## PARTS LIST

* SPECIFY FINISH

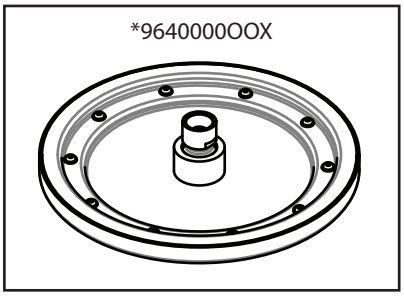



ILLUSTRIOUS DELUGE





## GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

| Model code + Schematic reference: | | | |
|---|---|---|---|
| Item number on drawing | PART NUMBER | DESCRIPTION | QTY |
| 1 | SB0199 | GRAND PRO ARM THREADED CONNECTOR | 1 |
| 2 | 9992 | SHOWER HEAD T.PIECE BASE | 1 |
| 3 | 1513 A SILVER | Hexagon Socket Set Screw | 6 |
| 4 | 6275WRAS | BS 4518 - 0150-15 | 2 |
| 5 | 9765 | OVERHEAD SPIGOT TUBE | 2 |
| 6 | TUI095 | STAR FANGLED NUT M6 x 25 | 1 |
| 7 | 10604 | OVER CLAMP BODY | 1 |
| 8 | 10605 | OVER CLAMP END | 1 |
| 9 | 8261 AF | PIVOT BLOCK ADJUSTER SCREW | 1 |
| 10 | 10608 BLACK | DOUBLE SIDED CLAMP PAD | 2 |
| 11 | 1515 A SILVER | Hexagon Socket Set Screw | 1 |
| 12 | 9991 | OVERHEAD SPIGOT FOR BRACE | 3 |
| 13 | SB0263 (WRAS) | DIN 3771 - 17 x 2.5 | 13 |
| 14 | 6251 AF | 140 INLET BLANKING PLUG | 1 |
| 15 | 6249 AF (1/2" BSP) | SWADLING WALL ARM MANIFOLD | 1 |
| 16 | 10607 | SCREW HOOK | 1 |
| 17 | 9994 | 114 WALL FIX BRKT | 1 |
| 18 | 9993 | 114 DECORATIVE RING | 1 |
| 19 | SB0267 | BS 4518 - 0330-1.78 | 1 |
| 20 | SB0026 | SILICONE SUCTION CUP DIA 20mm | 1 |
| 21 | 10780 | COVER CAP - PUSH FIT INTO THREAD | 1 |
| 22 | SB 0079 | DIN 3771 - 13 x 2 | 1 |

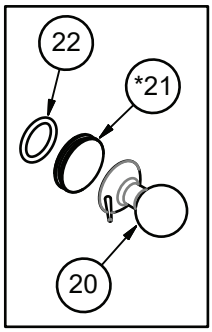


**9872100OOX: SHOWER BRACE WITH GLASS CLAMP WITH/WITHOUT DELUGE**

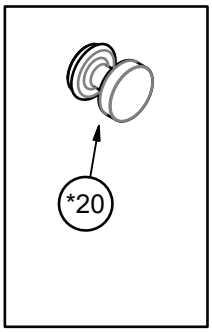


**9872300OOX: SHOWER BRACE WITH GLASS CLAMP WITH/WITHOUT DELUGE PLUS ROBE HOOK**

We recommend that these instructions are handed to the user with a note of a date of purchase and model details.
To order replacements quote:Part Descriptions, Model, Part Number and Colour.